


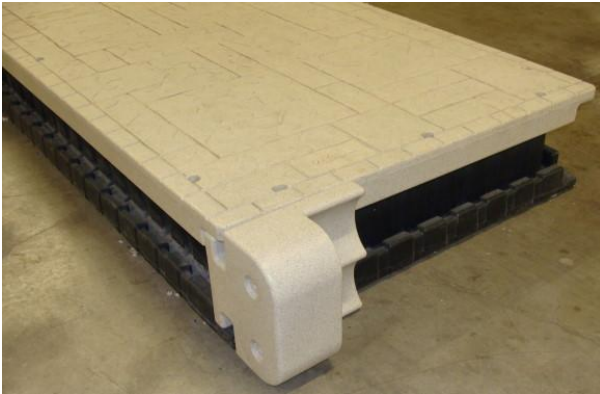


## **21934 Attaching Dock Ramp Kit to Wave Dock**

1. Insert dock hinge into the channel on the dock section by sliding it in from the end until the threaded insert lines up with hole on top. Secure with the 3/8 x 1 1/2 bolt and 3/8 washer.



2. Slide the dock ramp into the top opening of the dock hinge. Insert the second dock hinge into the dock channel on the other side and secure from the top with the 3/8 x 1 1/2 bolt and washer.

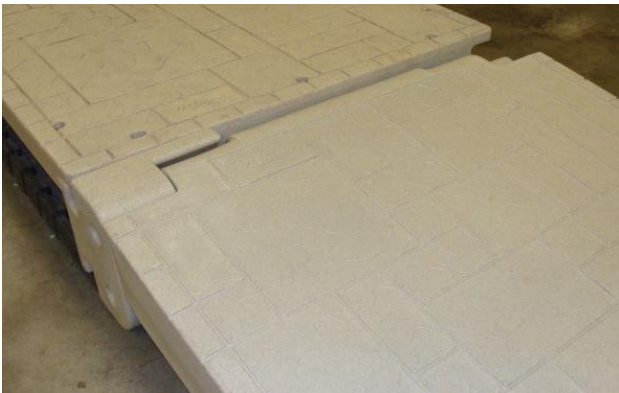

3. The final step is to attach the shoulder bolts and washers to the dock hinge and the dock ramp and tighten down. Do this on both hinges.

