



## **Dutton Lanson 1500A Installation Guide**


## Always Lower The Boat Lift Before Attempting Assembly.

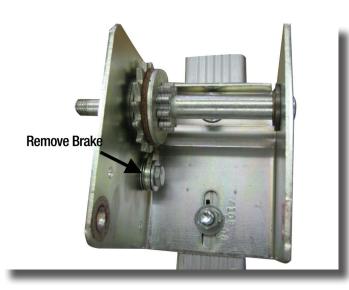


- 1. Lower the Boat Lift.
- 2. Remove the Wheel.
- 3. Remove the Cable Drum and Brake.

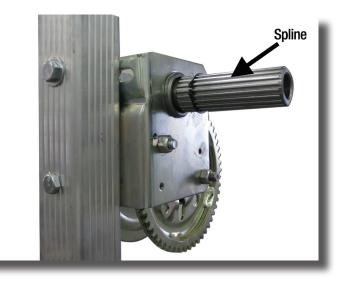

4. Install the Spline as Shown.

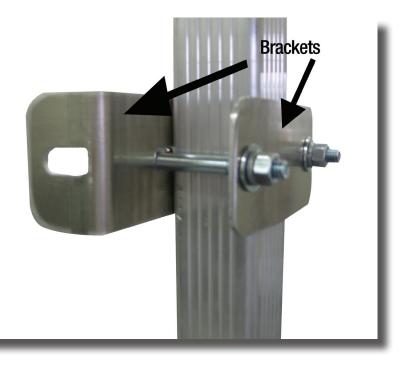

5. Install Brackets as Shown.

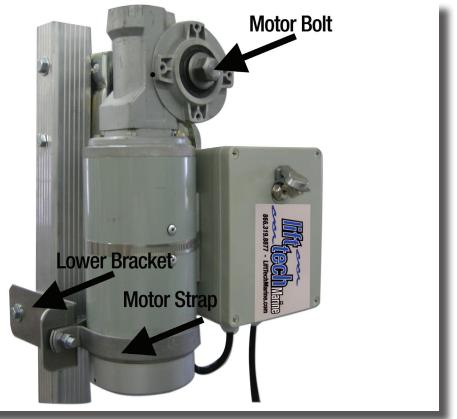

- 6. Slide Motor onto the Spline.
- 7. Install the Black Washer and Motor Bolt. Tighten to Approximately 70 Foot Pounds.
- 8. Install the Motor Strap around the Motor.
- 9. Connect the Lower Bracket and the Motor Strap together. Tighten all the Bolts.



## Plug in and Enjoy!

In case of a Power Outage, this Tool may be Inserted into a Drill to Raise or Lower your Lift.

Recommended Extension Cords up to 150 feet 12/3.

Any question regarding Electrical current requirements please call your Authorized Dealer or Lift Tech Marine 1-866-319-8877.

Caution: All power used on your dock or lift needs to be GFI protected at the shore line.

www.lifttechmarine.com