

Parts List			
ITEM	PART N	DESCRIPTION	QTY
1	01153	NUT, HEX 3/8-16 LOC Y/Z	10
2	02906	BOLT, CARRIAGE 3/8-16 X 1 Z/Y	10
3	03418	WASHER, FLAT 1/4 Y/Z	8
4	03671	NUT, HEX 1/4-20 LOC Y/Z	4
5	04751	BOLT, HHCS 1/4-20 X 3/4 Y/Z	4
6	05508	PLATE, LOCKING BOW SUPPORT	10
7	06105	WASHER, FLAT 3/8 SAE Y/Z	10
8	12687	PLANK, SIDE AUT14	2
8	13313	PLANK, SIDE AUT16	2
9	12732	PLUG, 1 X 3 BLACK	2
10	12748	PLANK, FRONT AUT64	1
10	12754	PLANK, FRONT AUT82	1

TRITON

Customer Instruction Sheet

KIT NO.:



12813-1464

13518-1482


13520-1682

DESCRIPTION	REV 0	DRAWN BY: Terri Feutz	DRAWING NO.:
ADD-A-PLANK 1464, 1482 & 1682		DATE: 4-24-09	12833


- FOR ASSEMBLY SEE INSTRUCTION SHEET 12689 - SIDE KIT (1464, 1482 & 1682) WITH THE FOLLOWING ADDITIONS:
1. SHORTEN CORNER POSTS BY 5". BE SURE TO SHORTEN ON END **WITHOUT** MILLED AREA. ALSO ADD CHAMFER TO CORNER POST AS IS SHOWN IN VIEW -A- TO AVOID A SHARP EDGE. (IF ADDING TWO ADD-A-PLANK KITS - SHORTEN CORNER POST BY 2"). SEE DETAIL B
 2. SHORTEN 8 RAIL UPRIGHTS BY 5" (FOR THE SIDE PLANKS). (IF ADDING TWO ADD-A-PLANK KITS - SHORTEN UPRIGHT BY 2"). SEE DETAIL C
 3. SHORTEN 2 RAIL UPRIGHTS BY 6 1/4" (FOR THE FRONT PLANKS). (IF ADDING TWO ADD-A-PLANK KITS - SHORTEN UPRIGHT BY 3 1/4"). SEE DETAIL D
 4. ATTACH PLANK IN THE SAME MANNER AS THE SIDE KIT INDICATES EXCEPT ELIMINATE SPACING BETWEEN PLANKS.
 5. BE SURE ALL HARDWARE IS FASTENED SECURELY.

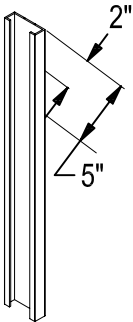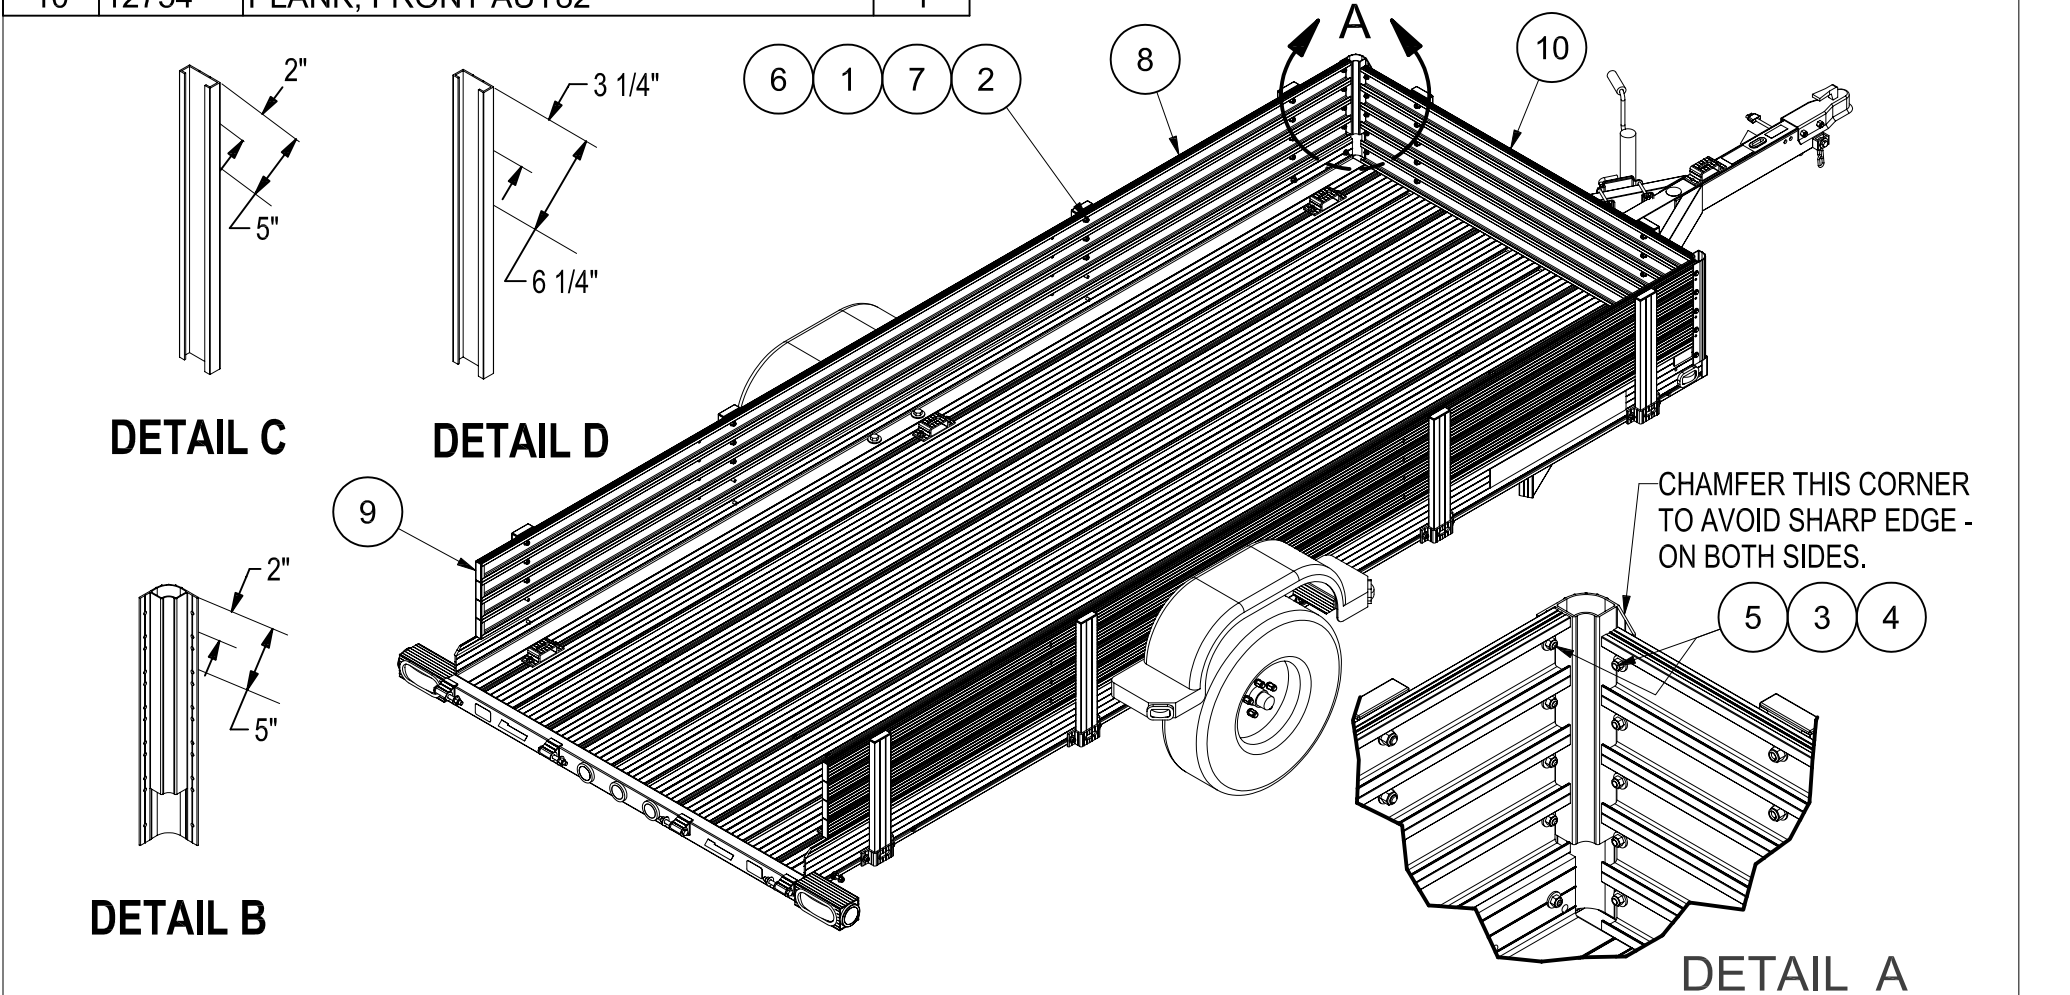


DETAIL C

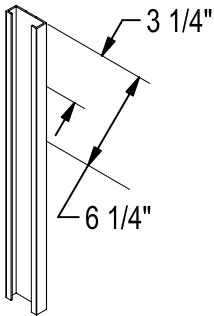

DETAIL D

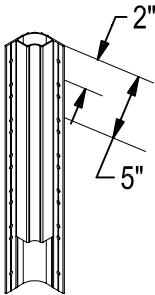

DETAIL B

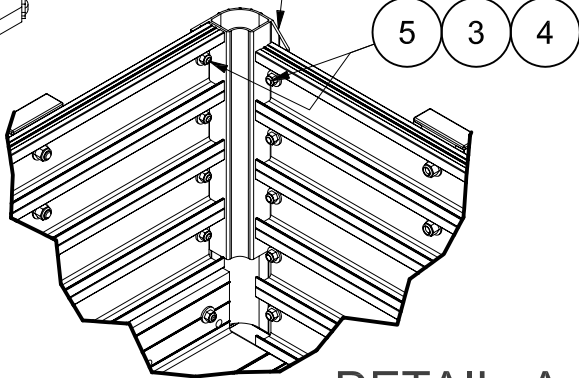

DETAIL A