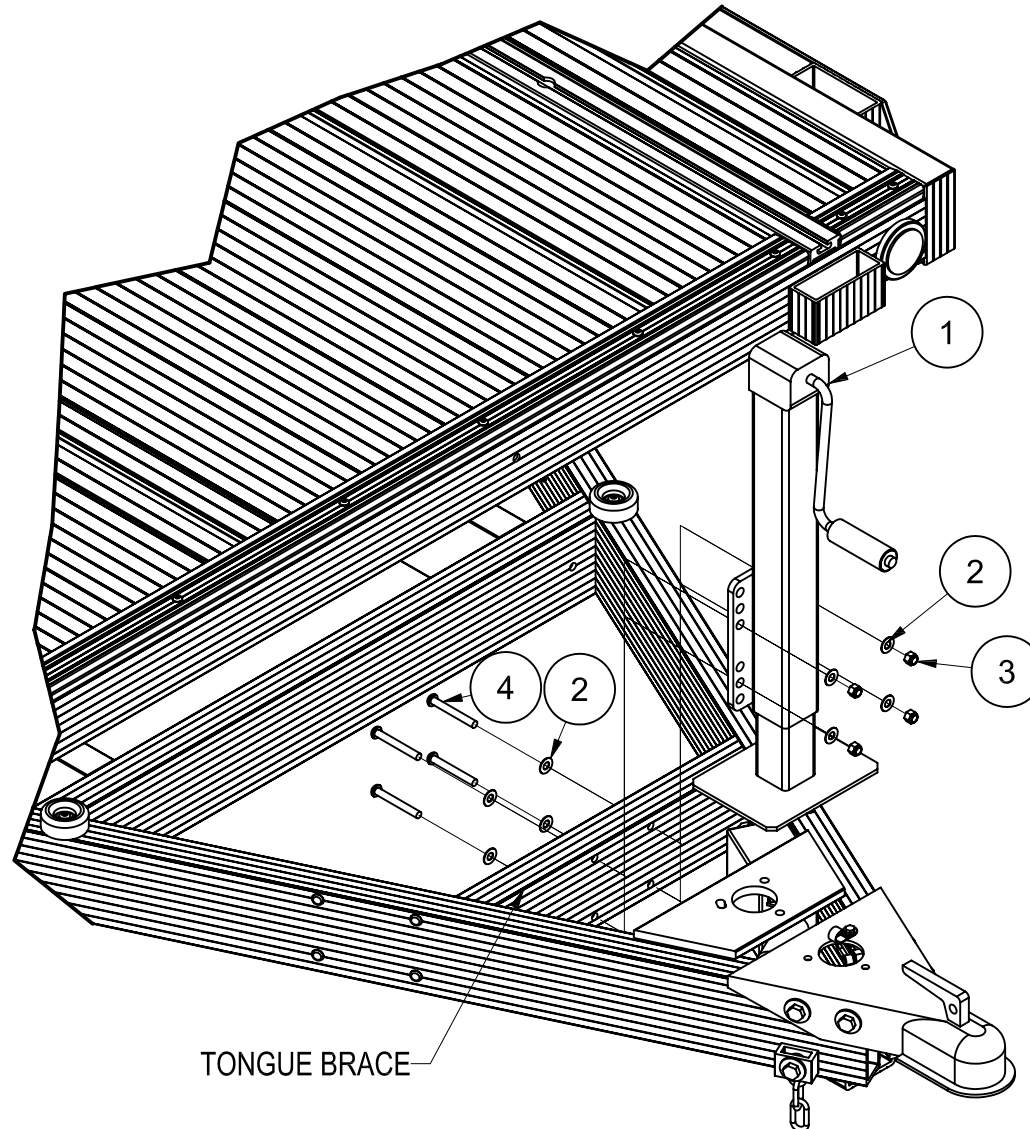


INSTALLATION INSTRUCTIONS:**READ COMPLETELY BEFORE STARTING!**

- 1) ATTACH JACK USING HARDWARE THRU EXISTING MOUNTING HOLES AS SHOWN.
NOTE: IF TRAILER DOES NOT HAVE EXISTING HOLES, USING FOLLOW INSTRUCTIONS:
- 2) MARK THE LOCATION OF THE MOUNTING HOLES BY CLAMPING JACK TO TONGUE BRACE AT DESIRABLE HEIGHT AND CENTERED WITHIN TONGUE BRACE.
- 3) DRILL 13/32 HOLES THRU BOTH WALLS OF TONGUE BRACE AND GO BACK TO STEP #1.

**TRITON** Customer Instruction SheetKIT NO.:
14637

DESCRIPTION

REV 0

DRAWN BY:

L Wagner

DRAWING NO.:

HAULER HD JACK

DATE:
7-1-10

14638

Parts List

ITEM	P/N	REV	DESCRIPTION	QTY
1	12376	1	JACK, 5000# SQ TUBE	1
2	05516	0	WASHER, FLAT 3/8 SS	8
3	05515	1	NUT, HEX 3/8-16 LOC SS	4
4	09027	0	SCREW, BUTTON HEAD 3/8-16 X 3 SS	4