



Wheel Drive MC Installation Guide


Always Lower The Boat Lift Before Attempting Assembly.

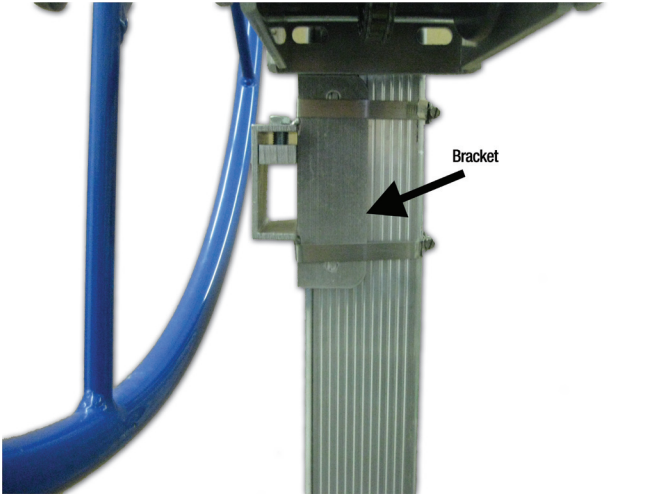


1. Mount Bracket Under Winch to Hoist.

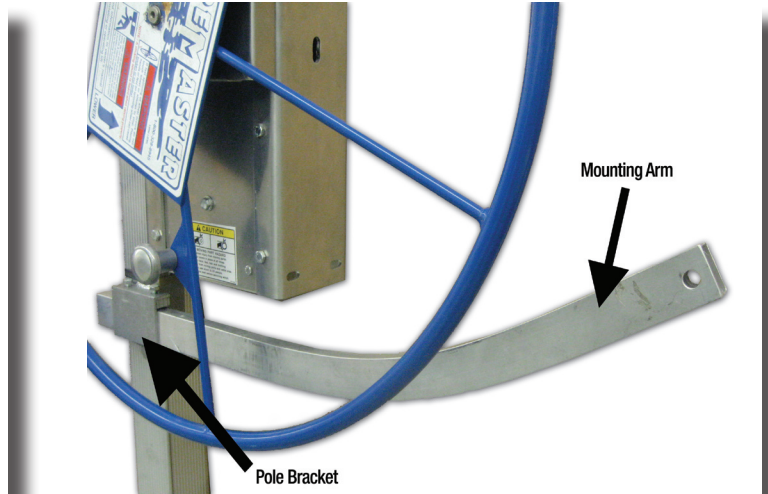


2. Install Mounting Arm in Pole Bracket.

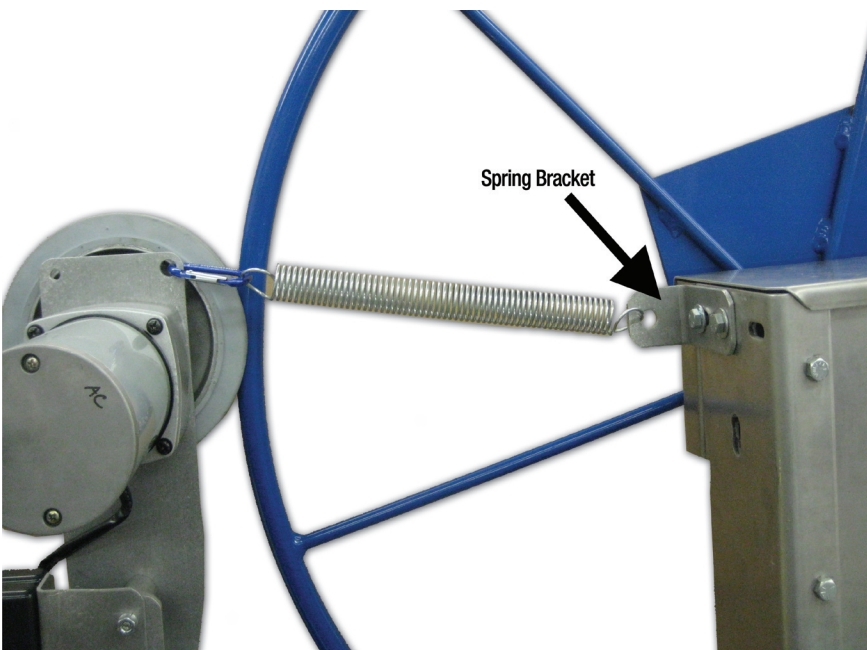

3. Install Spring Bracket as Shown. Spring Bracket is Universal for Many Different Applications.

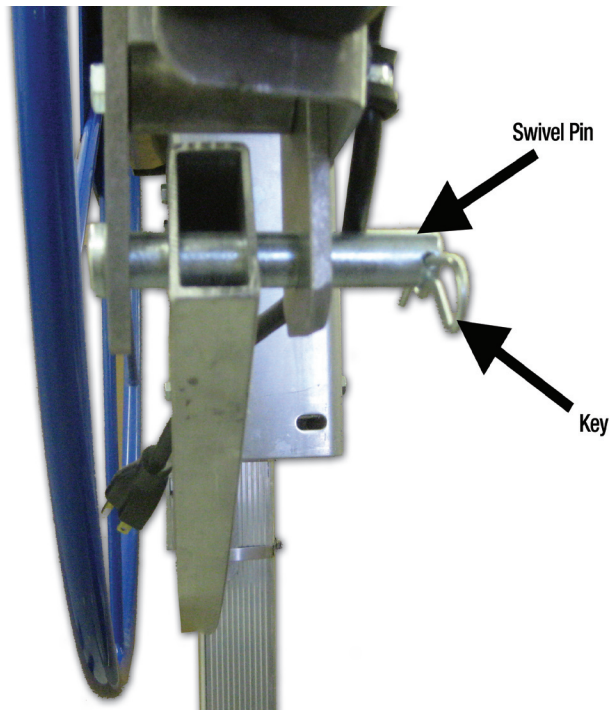

4. Slide Swivel Pin Between Motor and Mounting Arm. Slide Key into Swivel Pin. Attach Spring to Spring Bracket and Motor.

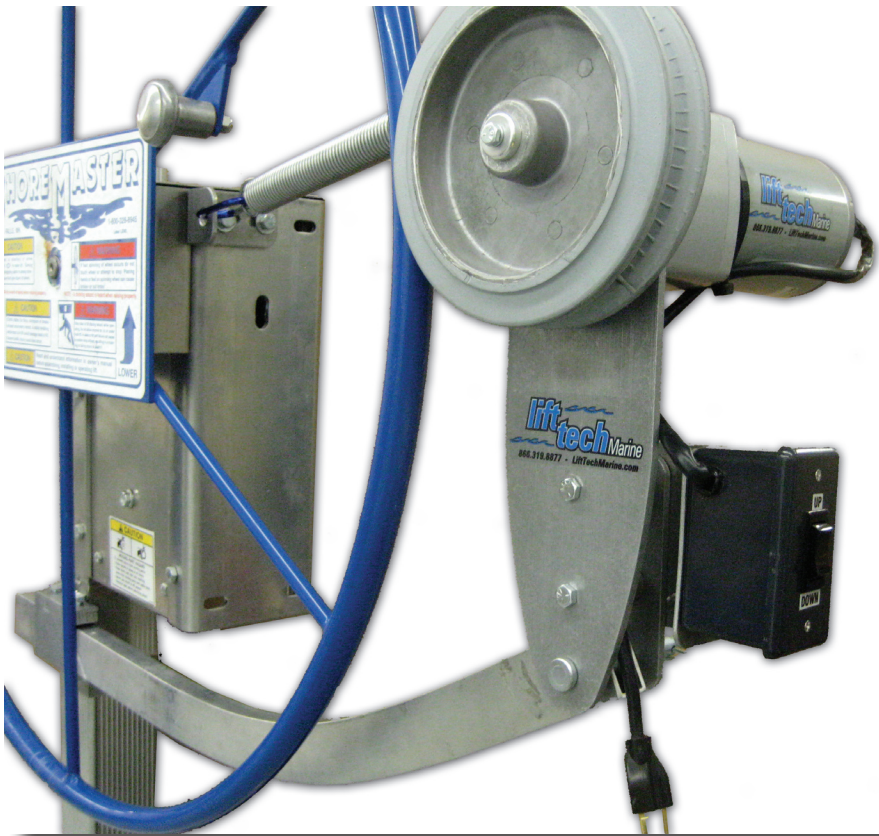

5. Final Assembly Should Appear as Shown With Motor in Vertical Position.

Plug in and Enjoy!

Recommended Extension Cords up to 150 feet 12/3.

Any question regarding Electrical current requirements please call your Authorized Dealer or Lift Tech Marine 1-866-319-8877.

Caution: All power used on your dock or lift needs to be GFI protected at the shore line.

www.lifttechmarine.com