


# ShoreLand'r

64853-- 78" Tongue W/Sidelights

61358-- 78" Tongue W/Brakeline

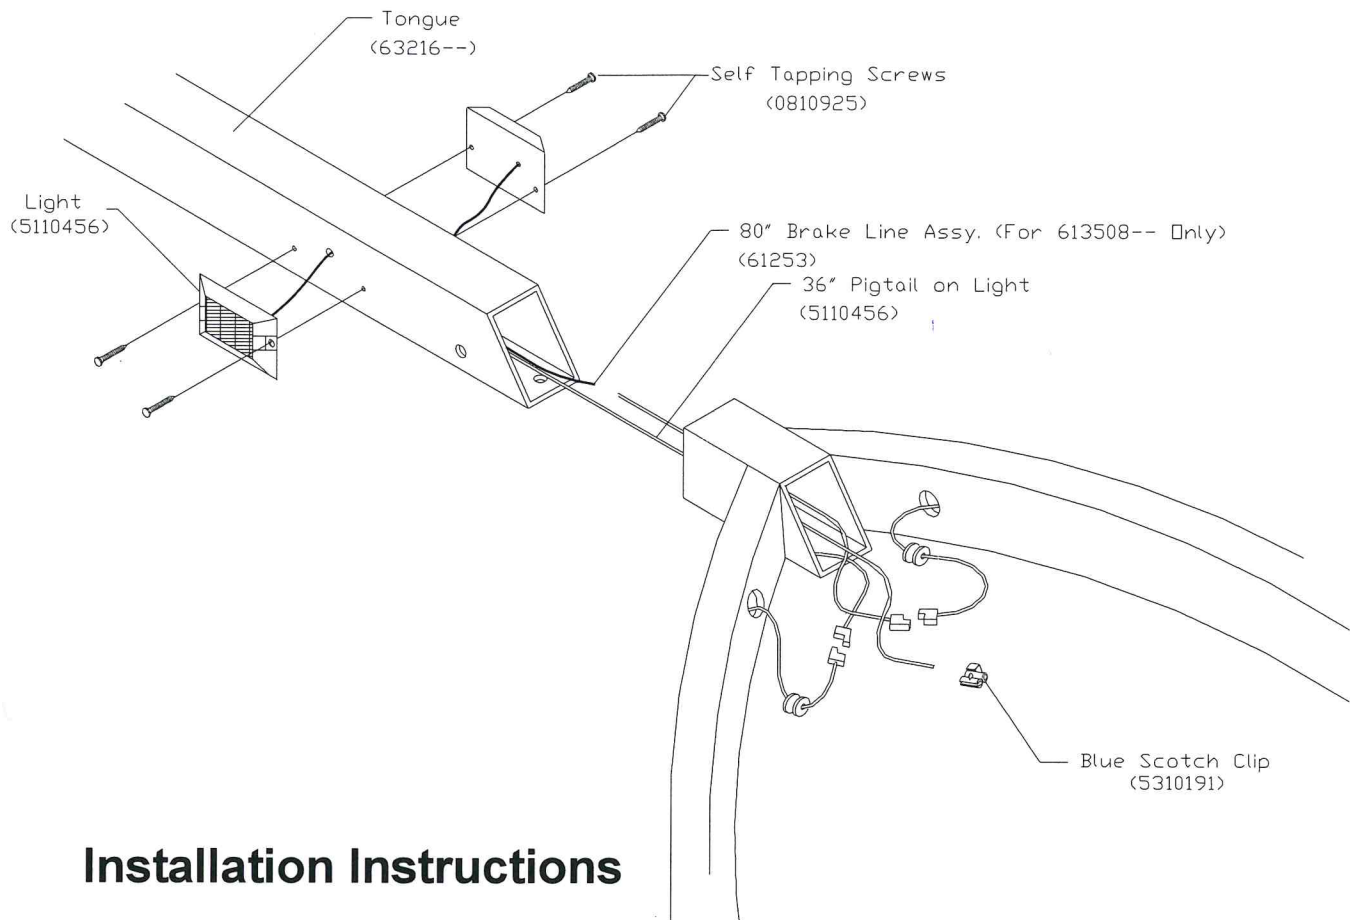

## Installation Instructions

1. Remove the items from the bag and sort by size.
2. Note that the light provided has a large molded plug on the end of the wire. This plug is not needed in this application. Remove it by cutting the wire next to the molded plug.
3. Thread the wire end with the plug removed in step 2 into the large hole in the side of the tongue and then push it backwards in the tongue until it comes out of the back of the tongue.
4. Attach the light to the side of the tongue with the screws provided. Note that care should be taken not to pinch the wire between the back of the light and the tongue when tightening.
5. Examine a blue scotch clip. Notice that it has one groove for a wire that will allow the wire to pass completely through it. The other notch has a plastic stop at one end.
6. Insert the brown-coated wire of the frame harness into the blue scotch clip notch that will let the wire pass completely through it. Trim the wire from the light just installed to the proper length for your application. Insert the end of this wire into the other notch in the blue scotch clip.
7. While holding the wires in position squeeze the metal spade of the blue scotch clip with pliers until the spade has completely penetrated both wires in the clip. Make sure the spade is completely squeezed into place. Close the lock tab of the blue clip over the spade.
8. Repeat steps 1 through 8 on the light on the other side of the tongue. Assembly is complete. Test the lights to make sure that when the taillights are lit that the lights just installed are lit as well. Assembly is complete.