


TA1042-00 Spare Tire Kit for 3X5 Tongue (6-Bolt)

BILL OF MATERIALS			
ITEM	PART #	DESCRIPTION	QTY
1	67574	SPARE TIRE BRKT 3X8 FRAME ZYU	1
2	0110096	HH 1/2-20 X 1-1/2	3
3	0340200	SUB 1/2 X 3 9/16 X 6 W/2 3/8 THR	2
4	1310040	LOCKWASHER 1/2 S/T MED	4
5	1410209	HEX LOCKNUT 1/2-20	3
6	1410229	HEX LUGNUT 1/2-20 13/16 OD Z&U	3
7	1440159	HEX NUT FINISH 1/2-13	4

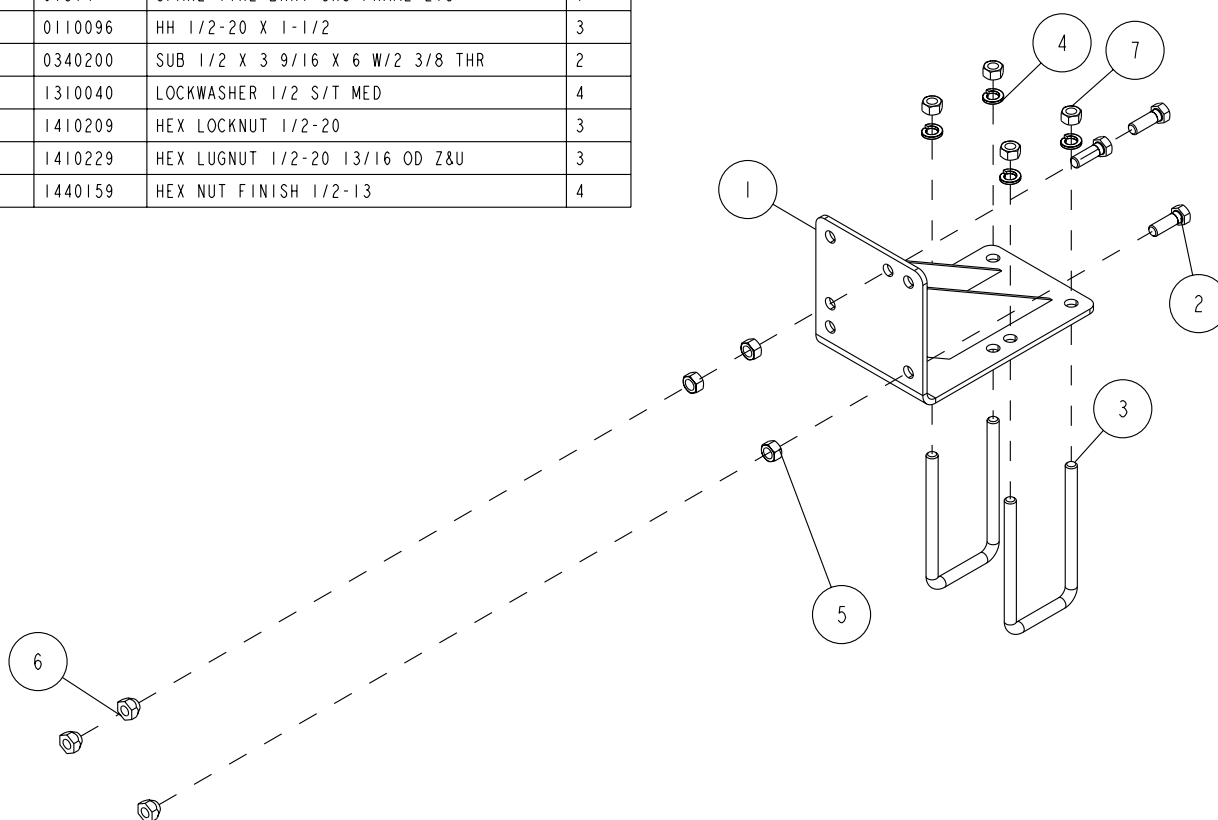

Mount the spare tire bracket assembly on the tongue of your trailer that faces away from traffic. From the rear of the trailer - mount the spare tire bracket assembly on the right side of the tongue of your trailer in a desired location that best fits your trailer and boat style.

Secure the spare tire bracket to the tongue using two (2) 1/2" X 3-9/16" X 6-1/2" square u-bolts (3/8" threads) and tighten with 1/2" hex lock nuts. Insert the three (3) 1/2" X 1-1/2" hex bolts and secure with 1/2" hex lock nuts.

Mount the spare tire and secure with 1/2" lug nuts (Ref.#6).