


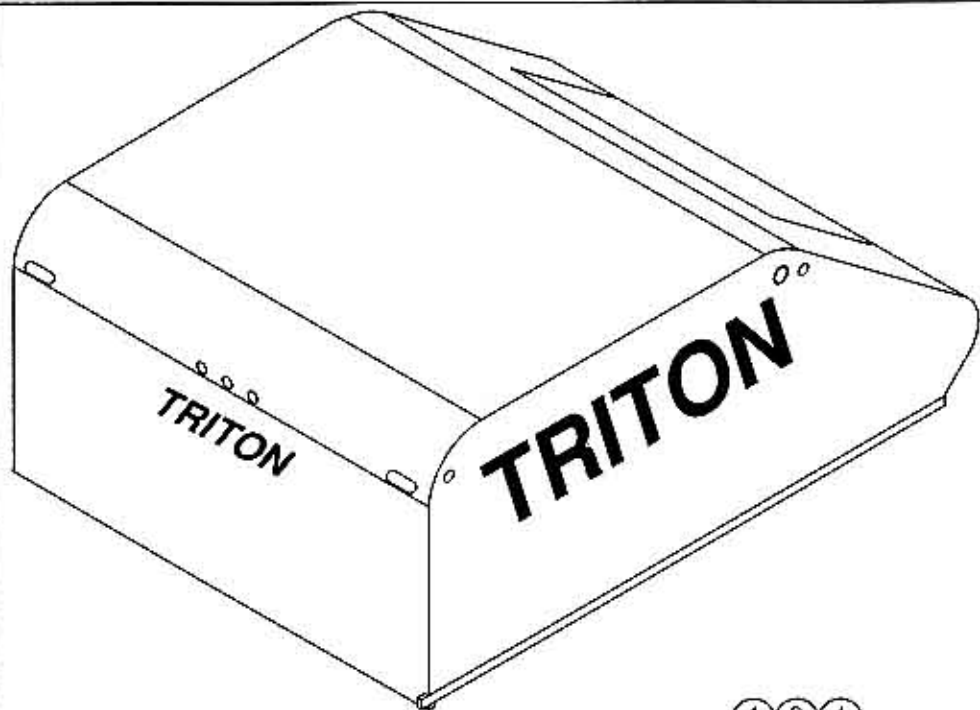

# TRITON Customer Instruction Sheet

DESCRIPTION:

STT LIGHT KIT

DRAWN BY:



LKW

DRAWING NO.:

DATE:

1509359

| # | PART NO. | DESCRIPTION                         | QTY |
|---|----------|-------------------------------------|-----|
| 1 | 0509353  | #8 RING TERMINAL                    | 2   |
| 2 | 0506361  | LIGHT, INTERIOR                     | 1   |
| 3 | 0508414  | WIRE HARNESS (2 PIECE)              | 1   |
| 4 | 0306410  | #8 x 1 1/4 HEX HEAD SHT METAL SCREW | 2   |
| 5 | 0506827  | 1/4" CABLE CLAMP                    | 10  |
| 6 | 0306109  | #8 x 5/8 HEX WASHER HEAD SCREW      | 12  |
| 7 | 0306696  | #12 TEK SCREW                       | 2   |
| 8 | 0507711  | WIRE WAY PLUG                       | 2   |

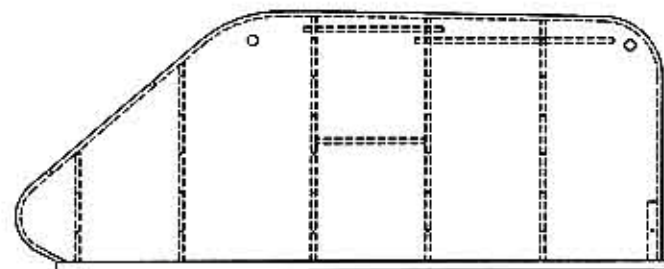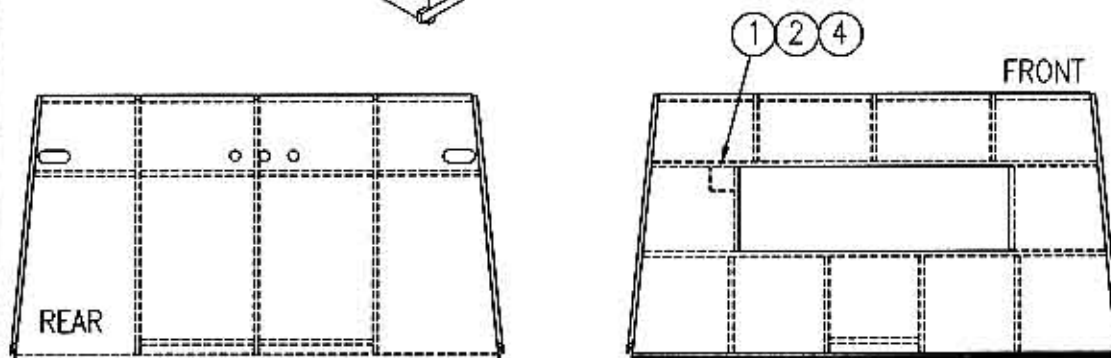

## ASSEMBLY INSTRUCTIONS

1. ATTACH INTERIOR LIGHT TO THE FRAME STRUCTURE LOCATED APPROXIMATELY AS SHOWN IN FRONT VIEW. SECURE WITH (2) #8 x 1 1/4" SHEET METAL SCREWS.
2. CONNECT FLAT FOUR END OF WIRE HARNESS AT BACK OF TONGUE TUBE. DRILL HOLE IN DECK, NEAR FRONT, (FOR REAR LIFT) OR SIDE RAIL AT PROP-ARM (FOR CENTER-LIFT) AND PULL BOTH LEADS THRU HOLE ONTO DECK.
3. STARTING ON THE DRIVER'S SIDE, STRING BROWN & WHITE LEADS TOWARD THE PASSENGER SIDE PANEL. CONNECT BULLET ON INTERIOR LIGHT TO BARREL ON WIRE HARNESS. ATTACH RING TERMINAL TO HARNESS, THEN FASTEN BOTH RING TERMINALS WITH #8 x 5/8 SCREW TO COVER FRAME. INSERT THE NEXT (2) BULLETS INTO FRONT LIGHT THEN PULL HARNESS THRU WIRE WAY AND INSERT THE NEXT (2) BULLETS INTO THE REAR LIGHT OF THE SAME PANEL.
4. PROCEED ONTO THE REAR PANEL, PLUGGING THE HARNESS INTO THE LIGHTS AS YOU GO. PLUG THE (2) BULLETS INTO THE REAR DRIVER SIDE LIGHT, PULL HARNESS THRU BOTH WIRE WAYS AND PLUG BULLETS INTO THE FRONT LIGHT. INSERT 2 WIRE WAY PLUGS INTO ENDS OF WIRE WAY TO PREVENT CHAFING.
5. ONCE AGAIN, STARTING ON THE DRIVER'S SIDE, ROUTE THE GREEN AND YELLOW LEADS THRU THE WIRE WAY AND CONNECT THE GREEN BULLET TO THE RIGHT TAIL LIGHT AND THE YELLOW BULLET TO THE LEFT TAIL LIGHT. CONNECT BARRELS FROM TONGUE HALF OF HARNESS TO BULLETS OF COVER HALF. NOTE: BE SURE TO CONNECT LIKE COLORS. THEN ROUTE DOWN THE PROP-ARM AND SECURE WITH NYLON TIES OR TAPE.
6. FOR 10' COVER - ROUTE HARNESS TOWARDS CENTER OF TRAILER AND INTO WIRE WAY TOWARDS REAR OF TRAILER.
7. FOR 12' COVER - ROUTE HARNESS TOWARDS AXLE MOUNT OF TRAILER AND THEN TOWARDS REAR OF TRAILER UNTIL CROSSMEMBER WITH LICENSE PLATE LIGHT. ROUTE HARNESS TOWARDS SIDERAIL OF TRAILER INTO WIREWAY AND TOWARDS THE REAR CROSSMEMBER OF TRAILER.
7. SECURE COVER HARNESS TO PANELS WITH CABLE CLAMPS AND ITEM 6 SCREWS, WHERE NEEDED.
8. SECURE COVER HARNESS TO TRAILER FRAME WITH CABLE CLAMPS AND ITEM 7 SCREWS.