

HERE'S WHAT'S IN YOUR KIT.
READ INSTRUCTIONS COMPLETELY BEFORE
STARTING.

#	PART NO.	DESCRIPTION	QTY
1	05516	3/8 FLATWASHER SS	26
2	05515	3/8-16 HEX LOC NUT SS	10
3	09282	3/8-16 K-LOCK NUT	8
4	08401	COVER PIN ASSEMBLY	2
5	06696	#12 x 1 HEX HEAD TEK SCREW	2
6	06590	5/16-18 x 1 HEX HEAD CAP SCREW SS	2
7	09250	COVER HINGE POST	4
8	09252	COVER HINGE BASE	4
9	07871	Q.S. SEAL	2
10	04796	#8 x 1/2 PHILLIPS HEAD SCREW	2
11	08132	SAFETY ARM	1
12	08158	GAS CYLINDER 1025N (10')	2
12	14471	GAS CYLINDER 1068N (11')	2
13	06211	5/16 FLATWASHER SS	12
14	06593	5/16-18 HEX LOC NUT SS	7
15	08329	SAFETY ARM BRACKET	1
16	11240	5/16-18 x 1 1/2 HHCS SS	1
17	08133	3/4" PLASTIC PLUG	1
18	07872	1" PLASTIC PLUG	4
19	08399	3/8-16 x 1 1/4 BUTTON HEAD SS	8
20	08138	3/8-16 x 1 CARRIAGE BOLT SS	8
21	08255	3/8-16 x 2 1/4 HEX HEAD CAP SCREW SS	2
22	08398	GAS CYLINDER PROTECTOR BRACKET	2
23	10069	#10 x 1/2" SQ DRIVE SHEET METAL SCREW, SS	2
24	10071	CORNER STOP	2
25	07896	#12 x 3/4 TEK SCREW	4

To obtain a copy of your Owner's Manual & Safety Instructions contact Triton at www.tritontrailers.com.


TRITON Customer Instruction Sheet

DESCRIPTION: COVERALL (PG. 2 OF 5)
GAS CYLINDER MOUNT



DRAWN BY: LKW
REVISION DATE: 5-11-10
DRAWING NO.: 08206

1. SET COVER ON TRAILER AND SLIDE FORWARD APPROXIMATELY ONE FOOT. PRE-ASSEMBLE (HAND TIGHT) HINGE POST TO BASE WITH SHOULDER ON POST TOUCHING BASE (4 COVER HINGE SUB-ASSEMBLIES AS SHOWN IN DETAIL -A-).

2. USING A 3/8 BOLT AS A SPACER BETWEEN THE COVER HINGE POST AND THE SIDE RAIL OF THE TRAILER, CLAMP COVER HINGE TO SIDE RAIL OF TRAILER. THE COVER HINGE SHOULD BE TIGHT TO THE OUTSIDE LIP ON THE BOTTOM OF THE SIDE RAIL. USING THE COVER HINGE AS A TEMPLATE, DRILL HOLES (13/32") IN CENTER OF SLOTS AT LOCATION #1 & #3 (DETAIL -B-), AND BOLT COVER HINGE TO SIDE RAIL WITH HARDWARE AS SHOWN. SLIDE COVER BACK INTO POSITION AND PIN BY LINING UP HINGE POST HOLE WITH DRIP RAIL HOLE. TIGHTEN HINGE POST TO HINGE BASE. ATTACH LANYARD EYELET TO COVER HINGE STRAIGHT FORWARD AS SHOWN IN DETAIL -A-. INSERT 1" PLASTIC PLUG INTO END OF THE COVER'S DRIP RAILS. (SEE DETAIL -A-)

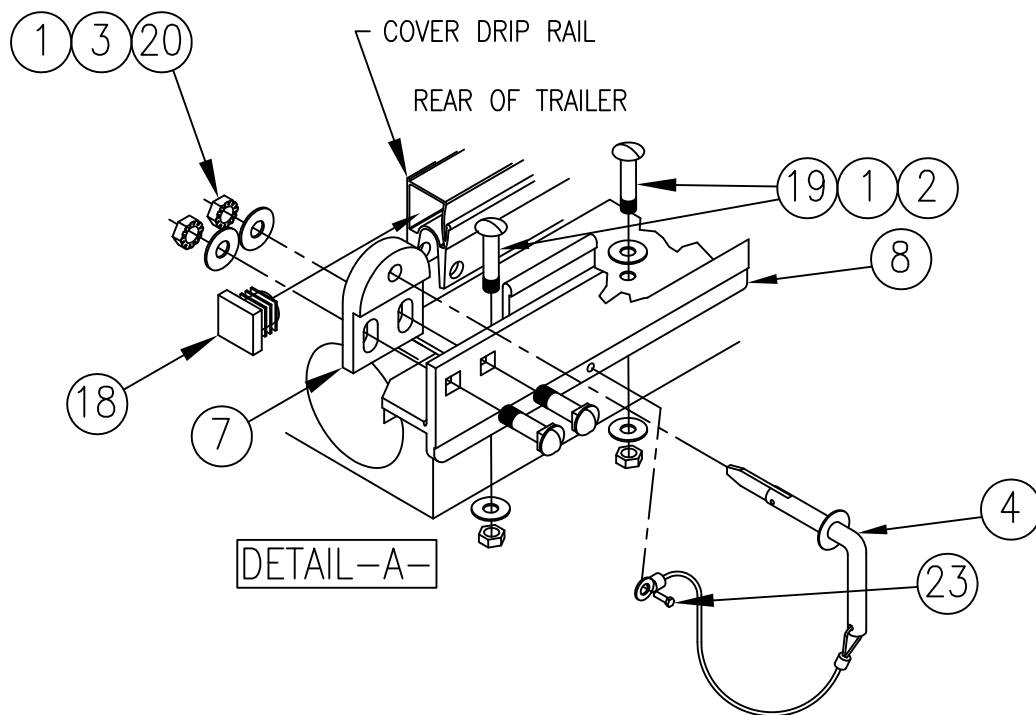

3. PIN COVER HINGES TO FRONT OF COVER. SWING UP INTO PLACE AND HOLD IN PLACE ON SIDE RAIL OF TRAILER. USING THE COVER HINGE AS A TEMPLATE, DRILL HOLE (13/32") AT LOCATION #1 (DETAIL -B-). BOLT COVER HINGE TO SIDE RAIL WITH HARDWARE AS SHOWN IN DETAIL -C-. PROP OPEN FRONT OF COVER. CAUTION: THIS MUST BE DONE TO AVOID DRILLING THRU BULB SEAL. DRILL HOLE (13/32") AT LOCATION #2 AND BOLT WITH HARDWARE AS SHOWN. LOWER COVER AND BOLT TO COVER HINGE WITH HARDWARE SHOWN IN DETAIL -C-. TIGHTEN HINGE POST TO HINGE BASE.

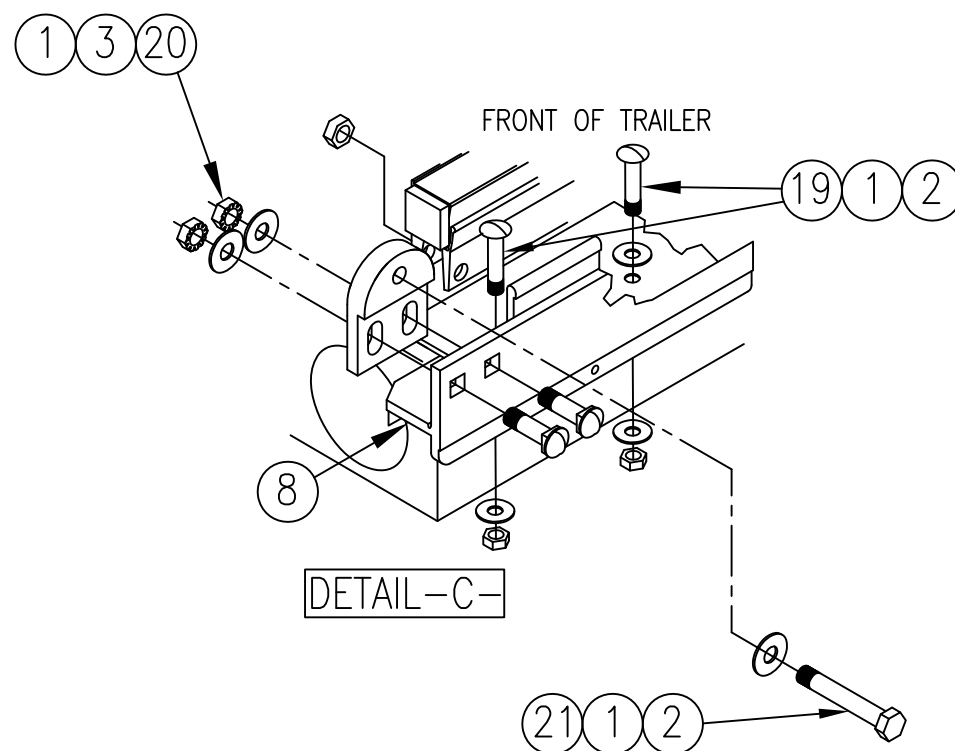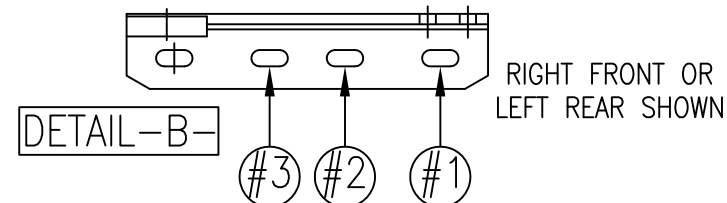


DESCRIPTION: COVERALL (PG. 3 OF 5)
GAS CYLINDER MOUNT

DRAWN BY: LKW
REVISION DATE: 5-11-10
DRAWING NO.: 08206

4. INSERT PLASTIC CAPS #18 TO BOTTOM OF BOTH CORNER STOPS #24. ATTACH CORNER STOPS TO REAR OF COVER USING SELF DRILLING SCREWS #25, IN THE CENTER OF THE SLOTS, AS SHOWN BELOW. NOTE: BE SURE TO LINE UP TOP HOLE IN CORNER STOP WITH CENTER OF ANGLED GUSSET. ALSO, BOTTOM OF CORNER STOP SHOULD BE RESTING ON TRAILER SIDE RAIL.


NOTE: IF YOU HAVE A 12' REAR LIFT ONLY APPLICATION, DISREGARD PAGES 4 AND 5 OF THIS CUSTOMER INSTRUCTION SHEET. USE STEPS #3 & #5-#12 OF CUSTOMER INSTRUCTION SHEET #1507810.

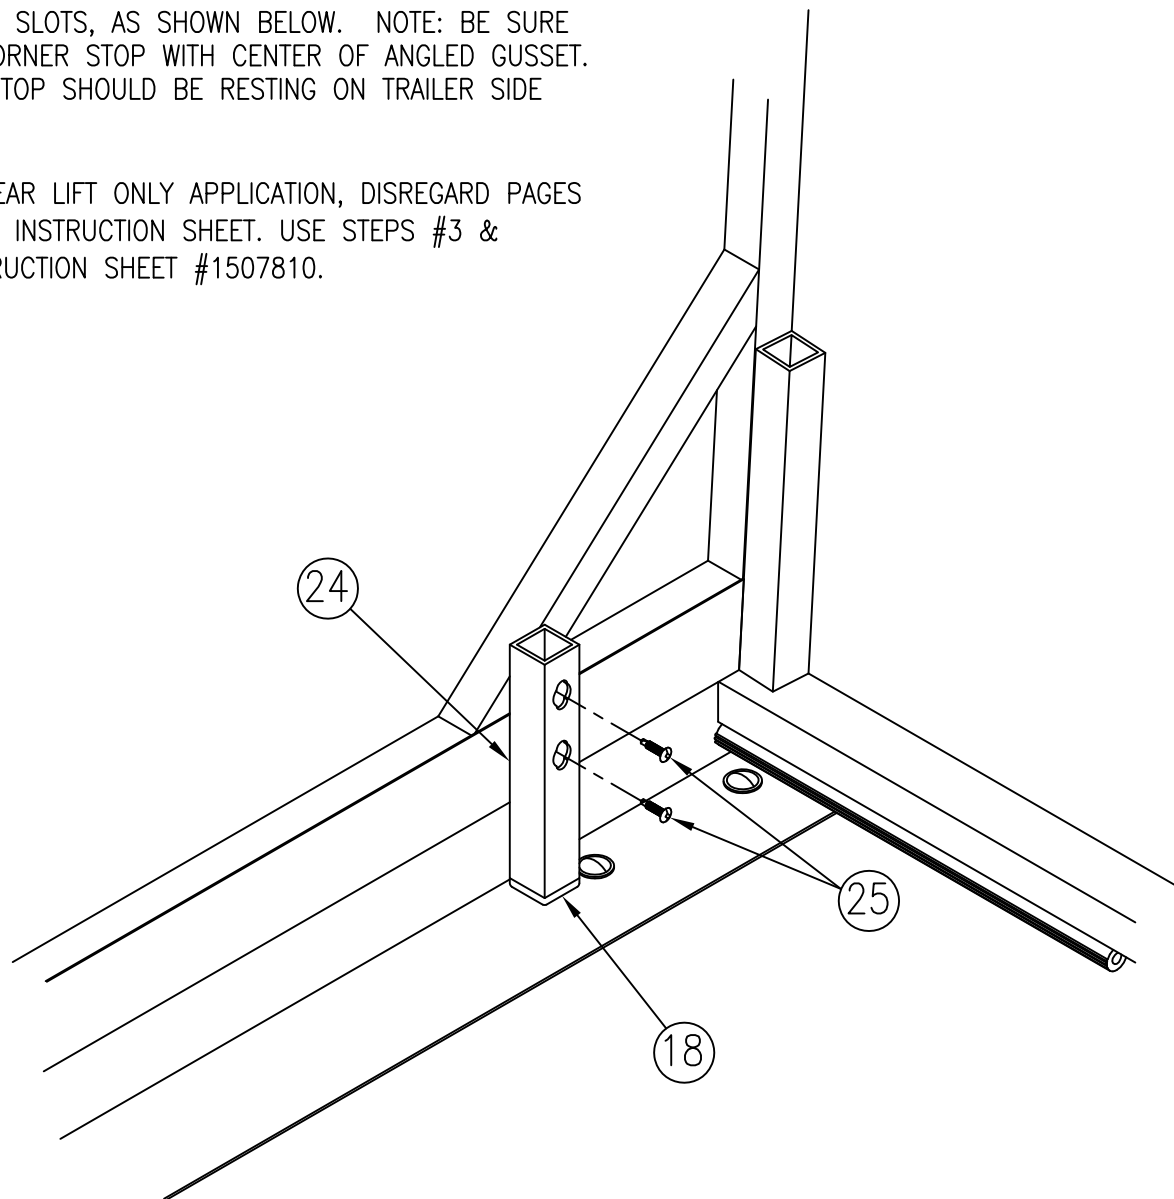


5. PROP OPEN REAR OF COVER. LOCATE AND DRILL 5/16" HOLE ON BOTH SIDE RAILS FOR GAS CYLINDER. SEE DETAIL -D-.

DESCRIPTION: COVERALL (PG. 4 OF 5)
GAS CYLINDER MOUNT

DRAWN BY: LKW
REVISION DATE: 5-11-10
DRAWING NO.: 08206

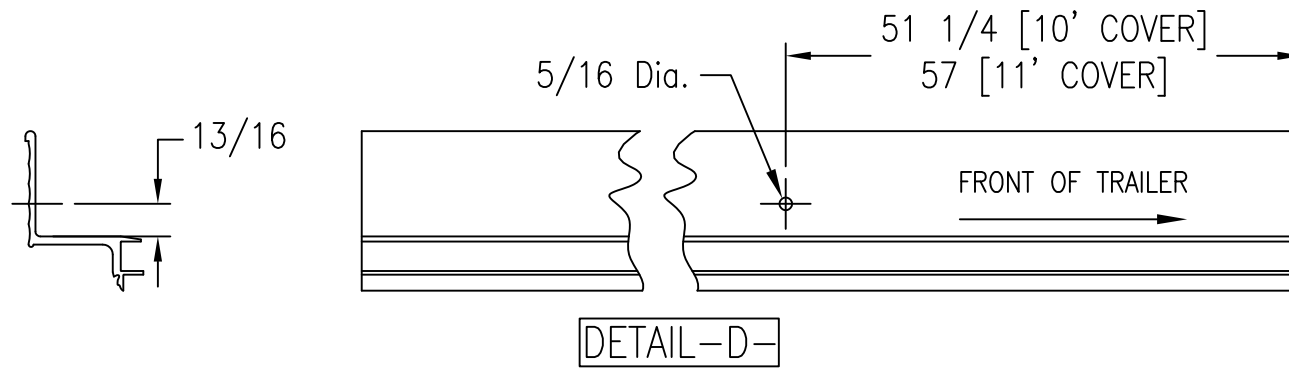


6. ATTACH GAS SPRING WITH HARDWARE AS SHOWN IN DETAIL -E-. INSTALL ROD END OF GAS CYLINDER INTO THE TRAILER SIDE RAIL WITH HARDWARE AS SHOWN. MOUNT OTHER END OF GAS CYLINDER TO MOUNTING BRACKET IN COVER WITH HARDWARE AS SHOWN. NOTE: THERE IS NO WASHER ON LOCK NUT SIDE OF COVER BRACKET.

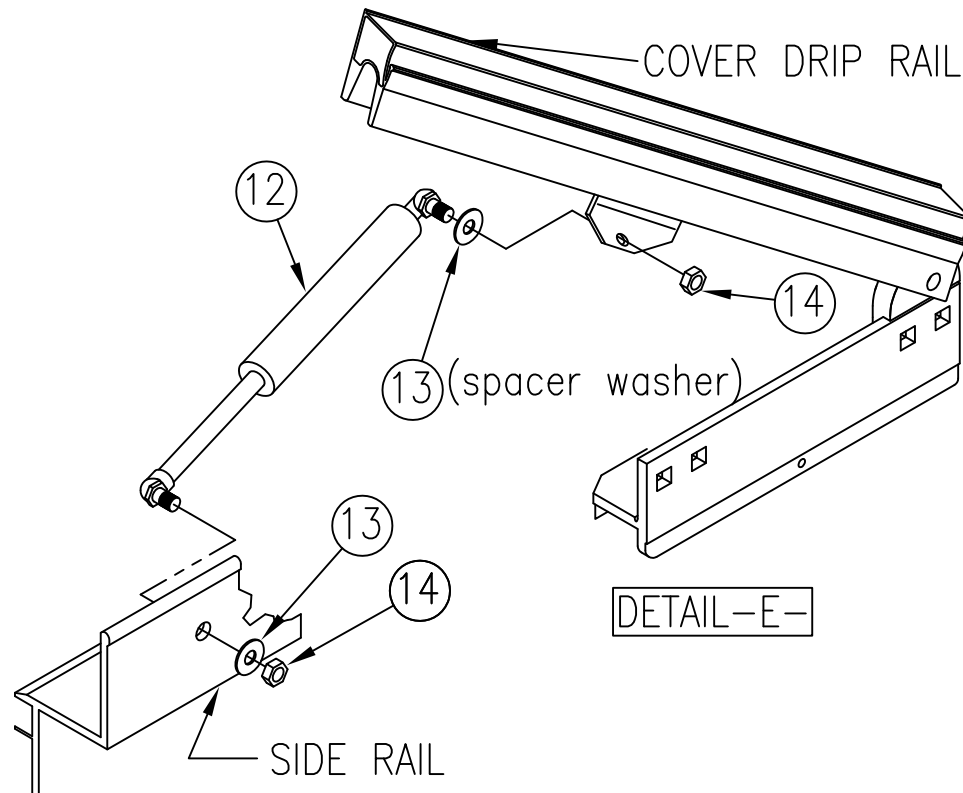


To obtain a copy of your Owner's Manual & Safety Instructions contact Triton at www.tritontrailers.com.

7. INSERT 3/4" PLASTIC PLUG INTO BOTTOM OF SAFETY ARM. ATTACH SAFETY ARM TO COVER USING HARDWARE AS SHOWN IN DETAIL -F-. MOUNT SAFETY ARM BRACKET AS SHOWN, WITH #12 x 1" TEK SCREWS.

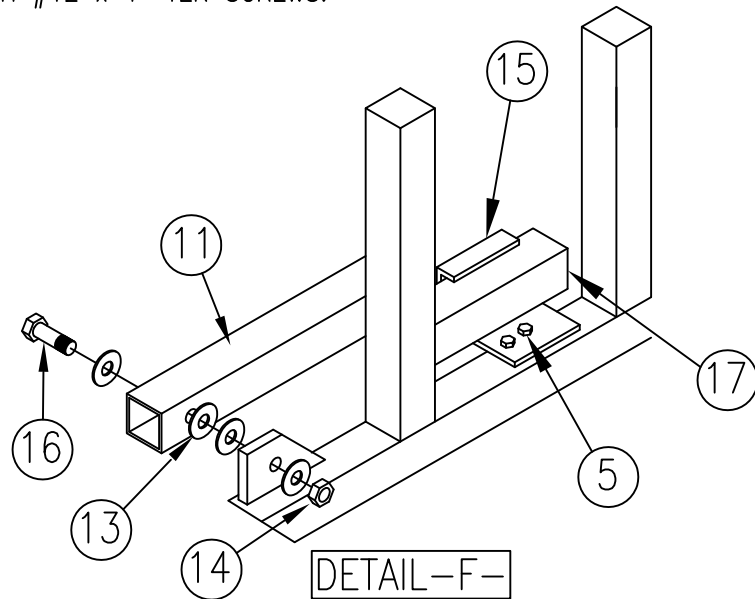

9. USING GAS CYLINDER PROTECTOR BRACKET AS A TEMPLATE, DRILL HOLE (11/32") 10" FROM THE GAS CYLINDER TO THE REAR OF THE TRAILER. MOUNT WITH HARDWARE AS SHOWN IN DETAIL -H-.

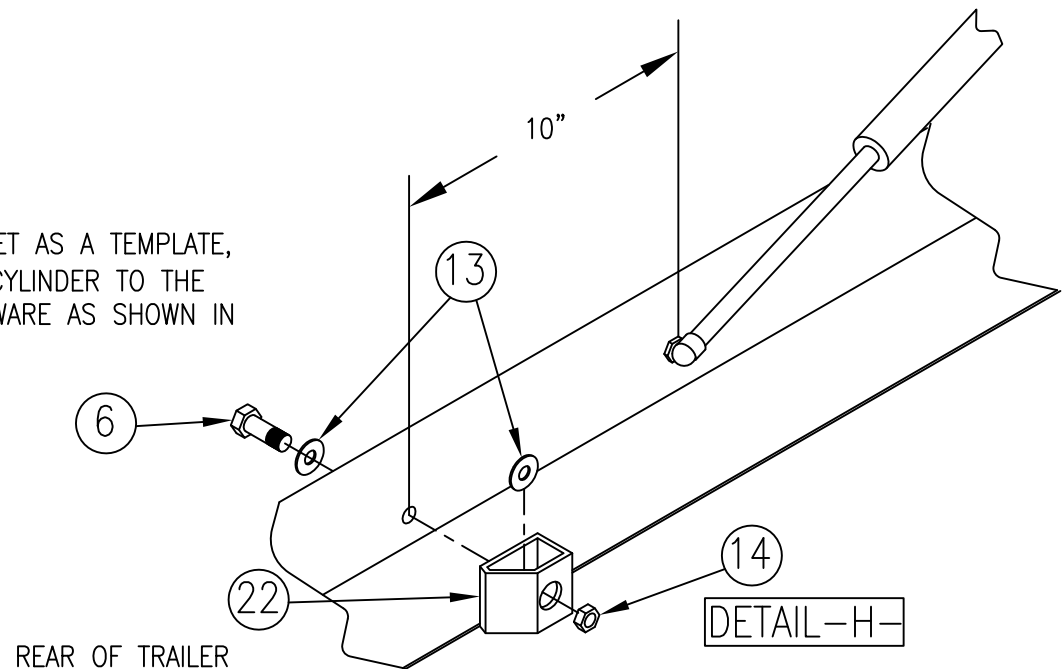

TRITON Customer Instruction Sheet

DESCRIPTION: COVERALL (PG. 5 OF 5)
GAS CYLINDER MOUNT

DRAWN BY: LKW
REVISION DATE: 5-11-10
DRAWING NO.: 08206

8. ATTACH QS SEAL TO THE QUIK SLIDE BY INSERTING THE SEAL INTO THE QUIK SLIDE CHANNEL DIRECTLY UNDER THE BULB SEAL ON THE FRONT OF THE COVER. SEE DETAIL -G-. USING 1/8" DRILL, DRILL PILOT HOLE THRU THE RUBBER TAB INTO THE QUIK SLIDE CHANNEL. FASTEN WITH #8 x 1/2" SCREW. ROLL SEAL ON TOP OF THE SCREW HEAD.

