



Wheel Drive Installation Guide

Always Lower The Boat Lift Before Attempting Assembly.

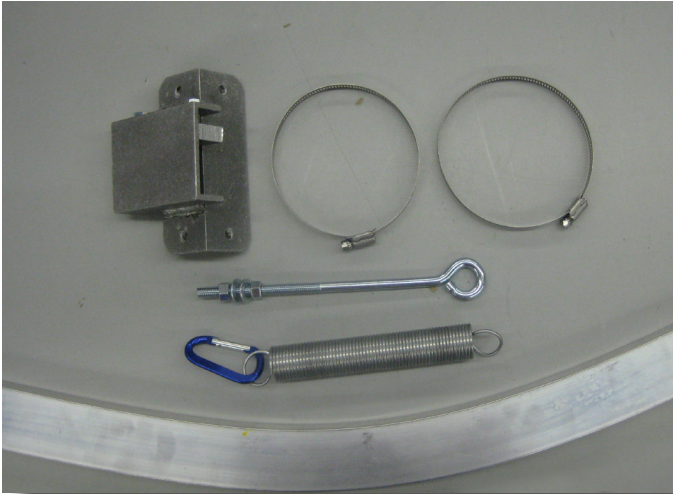


Parts Included in Kit.

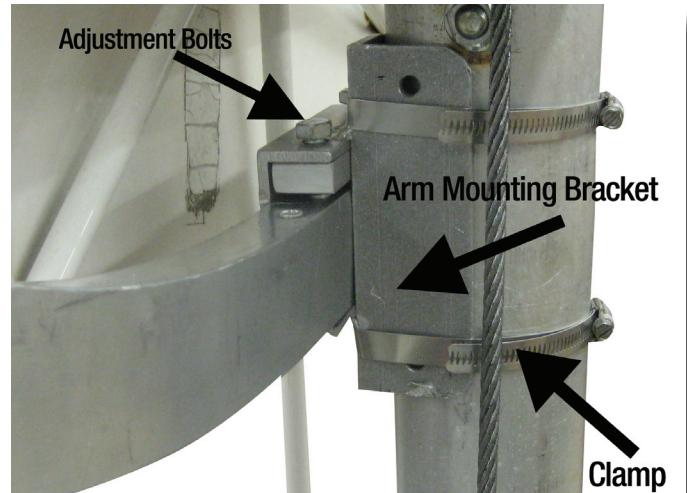


1. Install Arm Mounting Bracket
Approximately 2 Inches Below Winch
with Adjustment Bolts Up. Use Clamps
Provided in Parts Kit.



2. Align Bracket and Arm so
that it is Parallel with Existing
Wheel.

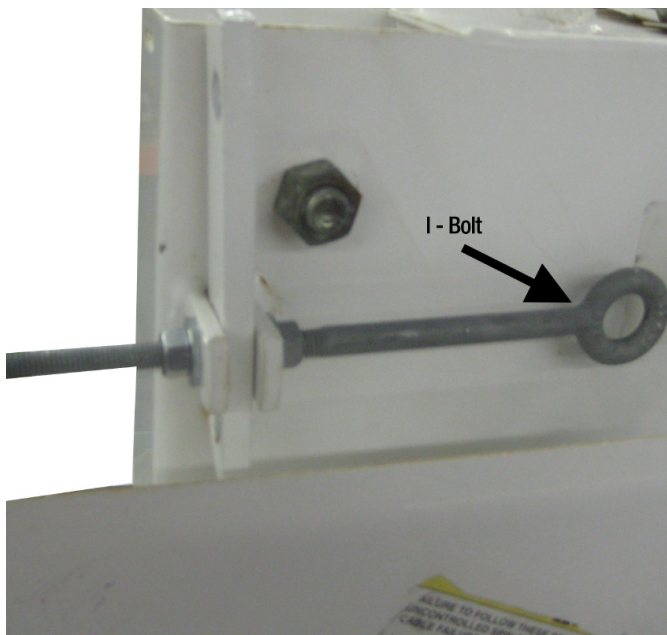


3. Remove 3/8 Inch Bolt on Wheel Lock and Replace with I-Bolt.

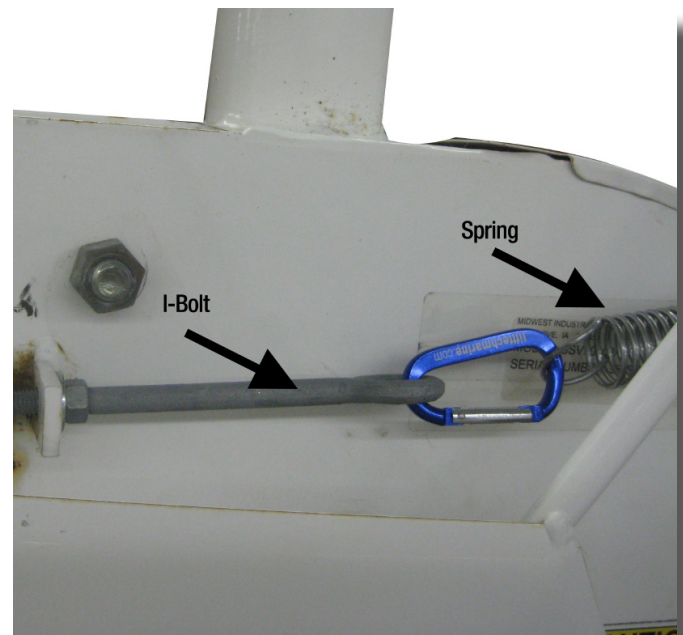

4. Attach Spring to I-Bolt.

5. Install Pivot Pin and Adjust Arm so that Motor is Straight Up and Down Against Lift Wheel.

Plug in and Enjoy!

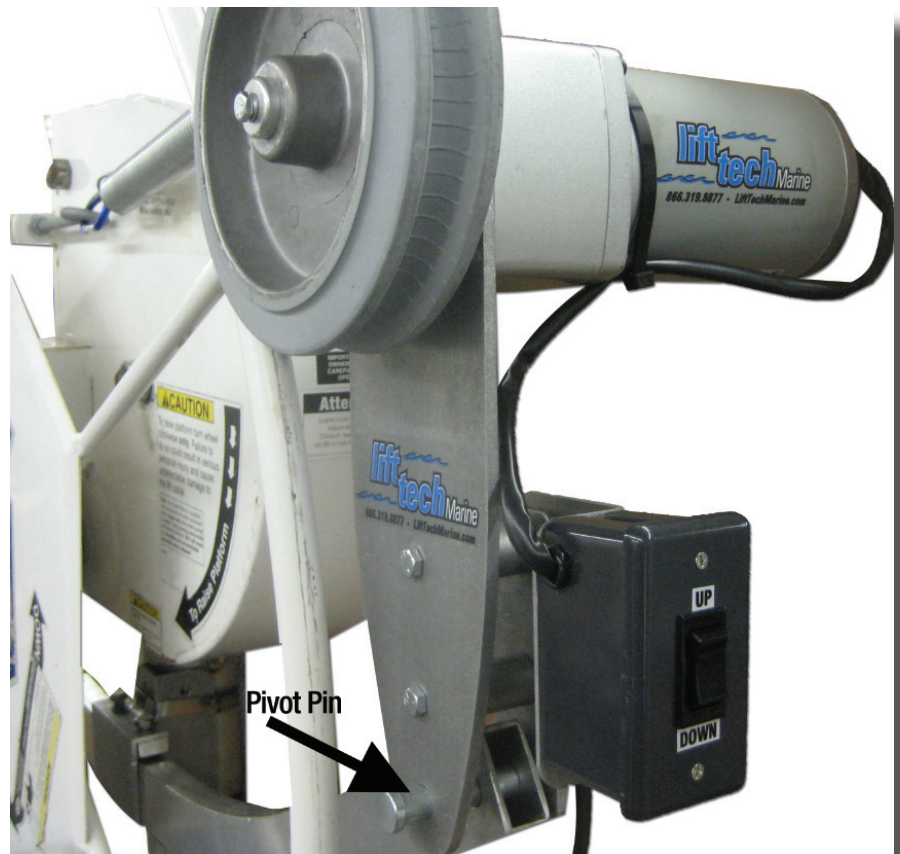

Recommended Extension Cords up to 150 feet 12/3.

Any question regarding Electrical current requirements please call your Authorized Dealer or Lift Tech Marine 1-866-319-8877.

Caution: All power used on your dock or lift needs to be GFI protected at the shore line.